

**Winter Start Accessory,  
Part No. CRWINSTR001A00  
Relay-Transformer Accessory,  
Part No. CATRANRY001A00**

**Rooftop Units with Puron® Refrigerant (3–10 Tons)  
Split System Condensing Units (7–1/2–20 Tons)  
Electric Cooling/Gas Heating Medium Rooftop Units  
(12–25 Tons)  
Electric Cooling/Electric Heating Medium Rooftop Units  
(12–25 Tons)  
Winter Start and Relay–Transformer Accessories  
50/60 Hz**

# Installation Instructions

## TABLE OF CONTENTS

PACKAGE CONTENTS .....	1
PACKAGE USAGE .....	1
SAFETY CONSIDERATIONS .....	1
GENERAL .....	2
INSTALLATION .....	2-12
Relay-Transformer Package - 10 to 20 Ton Split System Condensing Units with Semi-Hermetic Compressors with R-22 Refrigerant .....	2
Winter Start Accessory - 6 to 10 Ton Split System Condensing Units with Hermetic Compressors and 7 <sup>1</sup> / <sub>2</sub> to 20 Ton Split System Condensing Units with Semi-Hermetic Compressors with R-22 Refrigerant .....	3
Winter Start Accessory - 12 to 20 Ton High-Efficiency Medium Rooftop Units with R-22 Refrigerant .....	5
Winter Start Accessory - 12 to 25 Ton Standard Efficiency Medium Rooftop Units with R-22 Refrigerant .....	8
Winter Start Accessory - 3 to 10 Ton Units with Puron® Refrigerant .....	10

**IMPORTANT:** Read these instructions completely before attempting to install the accessory.

## PACKAGE CONTENTS WINTER START ACCESSORY CRWINSTR001A00

QTY	CONTENTS
1	Time-Delay Relay HN67XZ210

## RELAY-TRANSFORMER ACCESSORY CATRANRY001A00

QTY	CONTENTS
1	Relay Box Assembly
3	Connector Wires
1	Bushing and Locknut
2	Quick-Connect Terminals
2	Ring Terminals
4	No. 10 Screws
1	Wire Assembly

## PACKAGE USAGE


UNIT	ACCESSORY PART NUMBER
<b>10 to 20 Ton Split System Condensing Units with Semi-Hermetic Compressors with R-22 Refrigerant</b>	CRWINSTR001A00 CATRANRY001A00
<b>6 to 10 Ton Split System Condensing Units with Hermetic Compressors with R-22 Refrigerant</b>	CRWINSTR001A00
<b>7<sup>1</sup>/<sub>2</sub> to 10 Ton Split System Condensing Units with Semi-Hermetic Compressors with R-22 Refrigerant</b>	
<b>12 to 20 Ton Standard Efficiency Medium Rooftop Units with R-22 Refrigerant</b>	
<b>12 to 25 Ton Standard Efficiency Medium Rooftop Units with R-22 Refrigerant</b>	
<b>3 to 10 Ton Rooftop Units with Puron Refrigerant</b>	CRWINSTR001A00

## SAFETY CONSIDERATIONS

Installation and servicing of air-conditioning equipment can be hazardous due to system pressure and electrical components. Only trained and qualified service personnel should install, repair, or service air-conditioning equipment.

Untrained personnel can perform the basic maintenance functions. All other operations should be performed by trained service personnel. When working on air-conditioning equipment, observe precautions in the literature, tags and labels attached to the unit, and other safety precautions that may apply.

Follow all safety codes. Wear safety glasses and work gloves.

Recognize safety information. This is the safety-alert symbol . When you see this symbol on the unit and in instructions or manuals, be alert to the potential for personal injury.

Understand the signal words DANGER, WARNING, and CAUTION. These words are used with the safety-alert symbol. DANGER identifies the most serious hazards which **will** result in severe personal injury or death. WARNING signifies a hazard which **could** result in personal injury or death. CAUTION is used to identify unsafe practices which **may** result in minor personal injury or product and property damage. NOTE is used to highlight suggestions which **will** result in enhanced installation, reliability, or operation.

## INSTALLATION

### ⚠ WARNING

#### ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury and/or death.

Open and tag all disconnects before installing this equipment.

### ⚠ WARNING

#### ELECTRICAL SHOCK HAZARD

Failure to follow this warning could result in personal injury and/or death.

Open and tag all disconnects before installing this equipment.

## GENERAL

Winter Start Accessory CRWINSTR001A00 provides a 3-minute time delay for the low-pressure switch to prevent nuisance trips due to low ambient temperature.

Relay-Transformer Accessory CATRANRY001A00 enables installation of multiple liquid line solenoids and other larger 24-v loads.

Two winter start relays are required for all large rooftop units.


### Relay-Transformer Package — 10 to 20 Ton Split System Condensing Units and Semi-Hermetic Compressors with R-22 Refrigerant

Refer to unit label diagram and install Relay-Transformer Package CATRANRY001A00 in condensing unit as follows:

1. Install component below Terminal Block 2 (TB2) in unit control box. A knockout is provided in the bottom of the control box for running wires from the accessory to TB2.
2. Using the bushing nut (coupler) provided, route the 6 wires through the knockout and tighten the bushing nut.
3. Secure side of accessory to condensing unit using 2 screws provided. (See Fig. 1.)
4. Connect wires to unit controls as shown in Fig. 2.

INSTALL WINTER START ACCESSORY  
(TIME-DELAY RELAY) HERE

RELAY-TRANSFORMER PACKAGE  
(SHOWN INSTALLED)

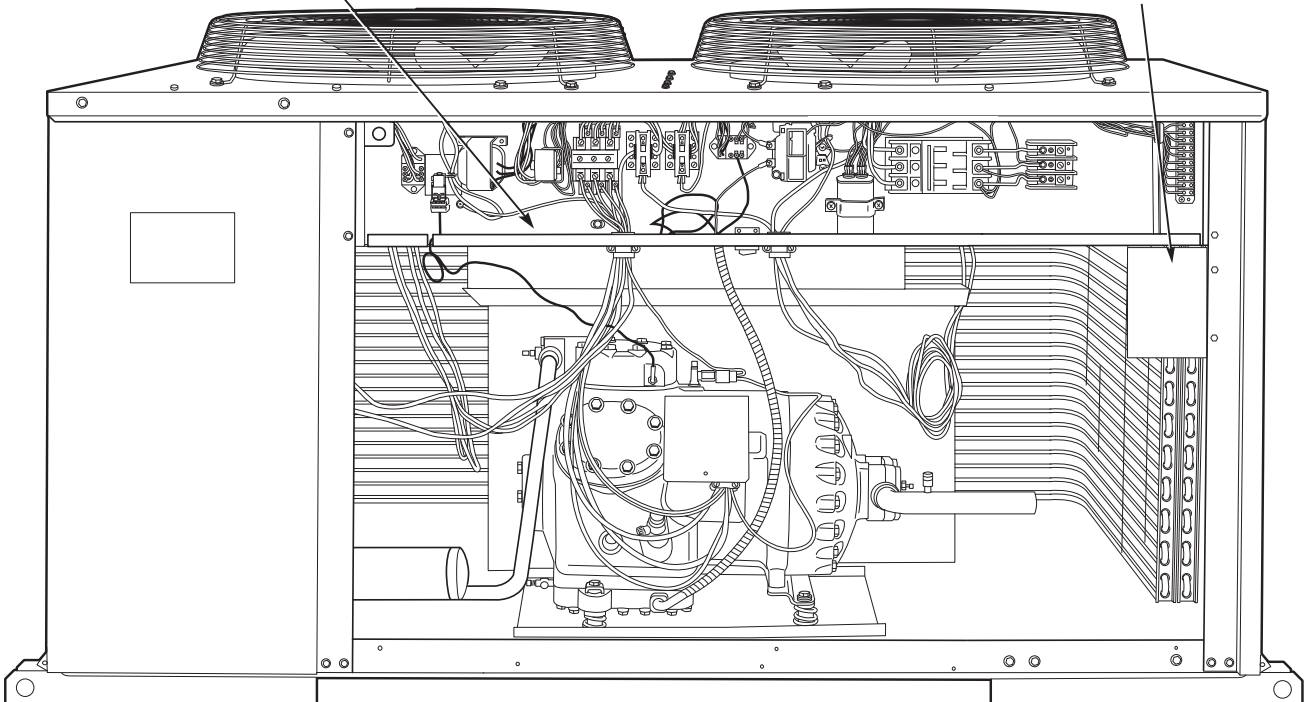

**Fig. 1 - Recommended Locations for Accessory Components in 10 to 20 Ton Split System Condensing Units with Semi-Hermetic Compressors with R-22 Refrigerant**

C07471

# Winter Start Accessory — 6 to 10 Ton Split System Condensing Units with Hermetic Compressors and 7½ to 20 Ton Split System Condensing Units with Semi-Hermetic Compressors with R-22 Refrigerant

Refer to unit label diagram and install Time-Delay Relay (TDR), in condensing unit as follows:

For 10 to 20 ton split system condensing units with semi-hermetic compressors:

1. See Fig. 1 for location of Time-Delay Relay (TDR).
2. Use field-supplied screws and be certain mounting holes are positioned upwards (Fig. 4), as device is position-sensitive.

3. Run field-supplied wires from quick-connect terminals in device to unit controls as shown in Fig. 5. All wires must be 18 AWG (American Wire Gauge).

For 6 to 10 ton split system condensing units with hermetic compressors or 7½ to 10 ton split system condensing units with semi-hermetic compressors:

1. See Fig. 3 for location of TDR.
2. Use field-supplied screws and be certain mounting holes are positioned upwards (Fig. 4), as device is position-sensitive.
3. Run field-supplied wires from quick-connect terminals in device to unit controls as shown in Fig. 6. All wires must be 18 AWG (American Wire Gauge).


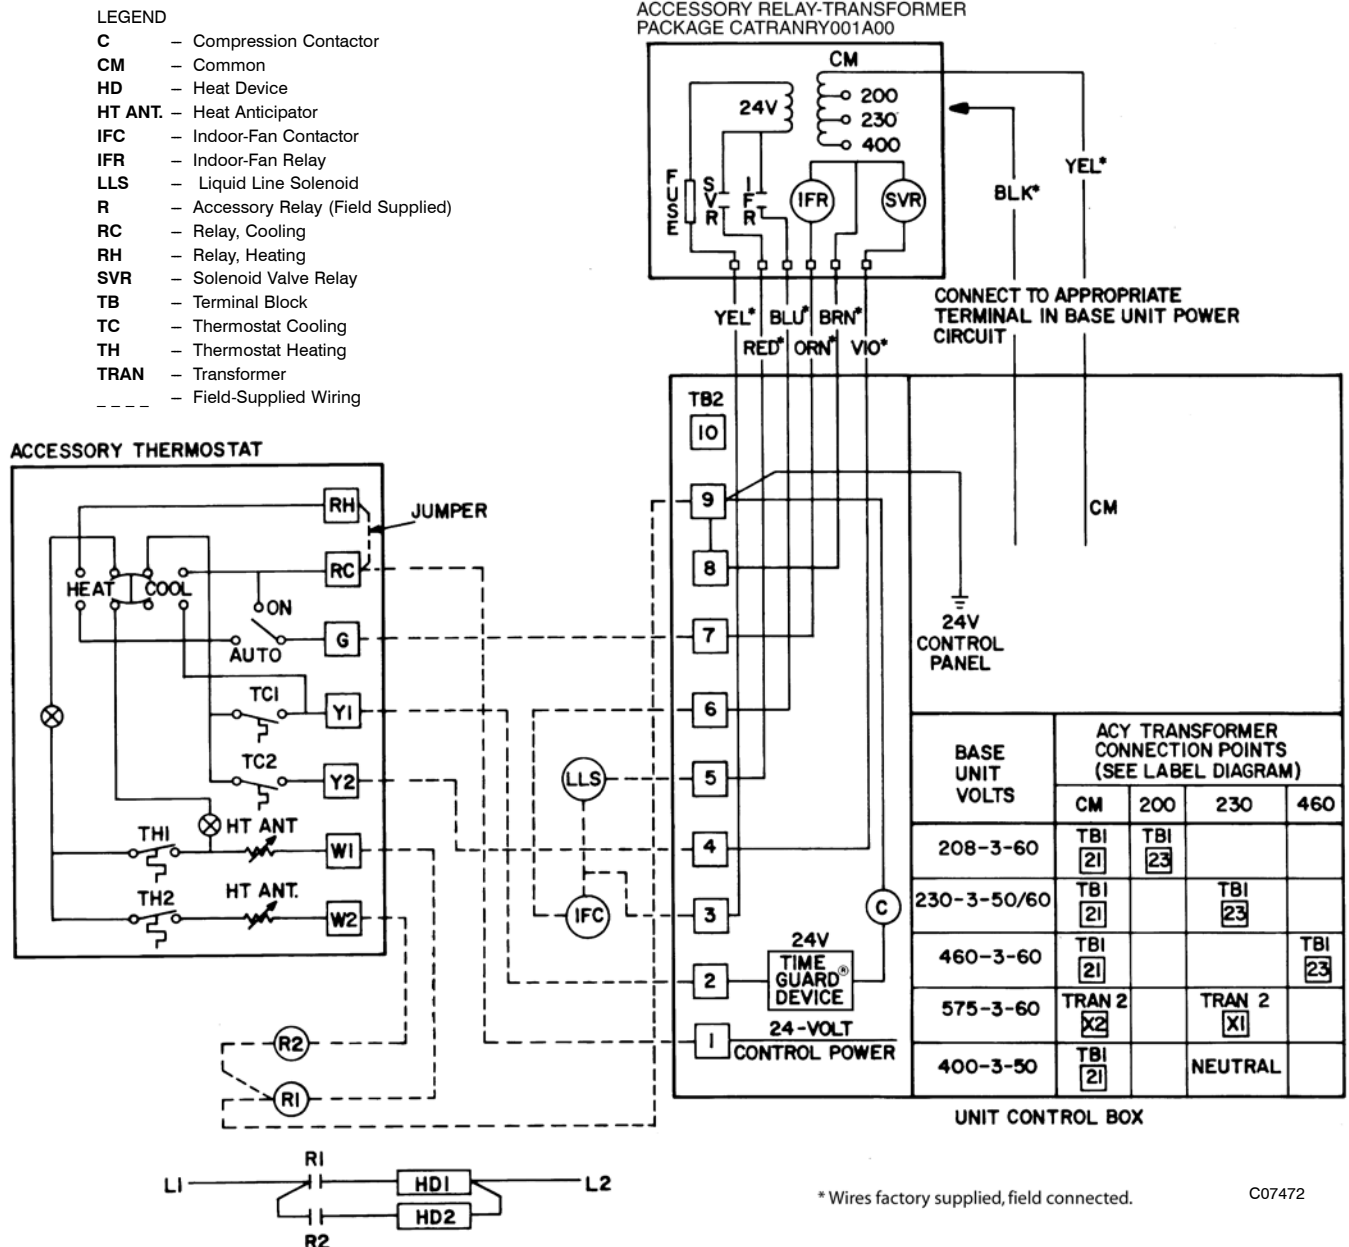



Fig. 2 - Relay-Transformer Accessory Wiring

CRWINSTR/CATRANRY

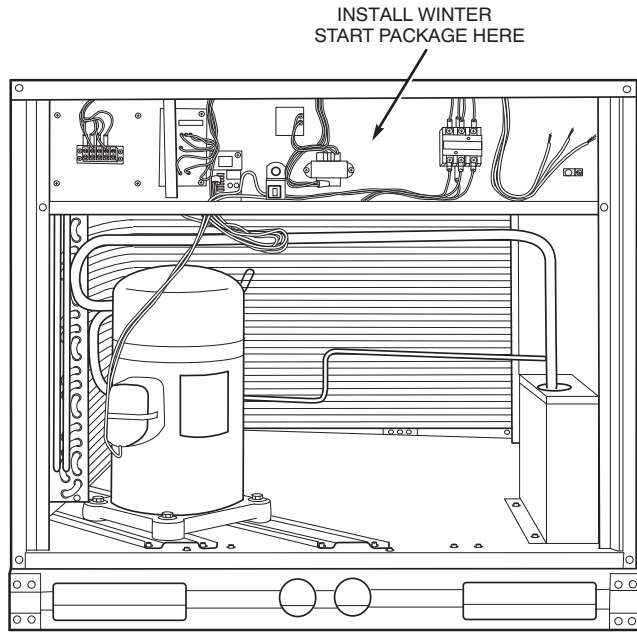


C07473

**Fig. 3 - Recommended Location for Winter Start Accessory (Time-Delay Relay) in 6 to 10 Ton Split System Condensing Units with Hermetic Compressors and 7<sup>1</sup>/<sub>2</sub> to 10 Ton Split System Condensing Units with Semi-Hermetic Compressors with R-22 Refrigerant**

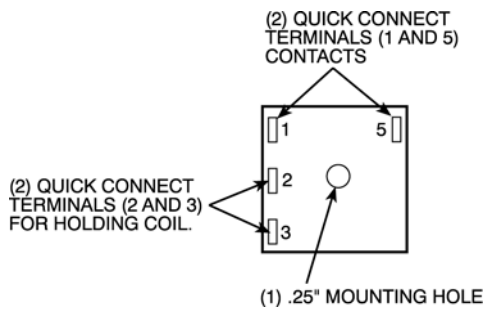

C07474

**Fig. 4 - Top View, Winter Start Accessory (Time-Delay Relay)**

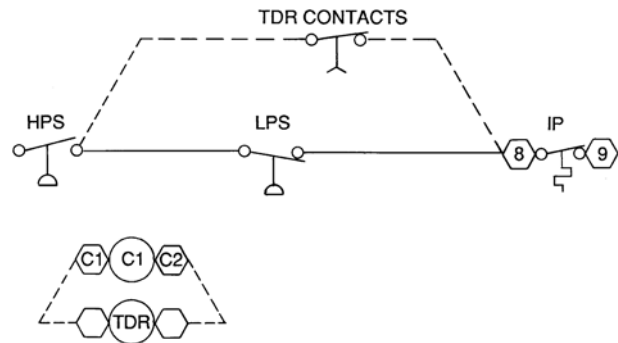

**LEGEND**

- C — Contactor
- HPS — High-Pressure Switch
- IP — Internal Protector
- LPS — Low-Pressure Switch
- TDR — Time-Delay Relay
- — Field-Supplied Wiring

C07475


**Fig. 5 - Connection Points, Time-Delay Relay, Winter Start Accessory; 10 to 20 Ton Split System Condensing Units with Semi-Hermetic Compressors with R-22 Refrigerant**

## Winter Start Accessory — 12 to 20 Ton High-Efficiency Medium Rooftop Units with R-22 Refrigerant


Refer to unit label diagram and install Time-Delay Relay (TDR) in unit as follows:

1. Install the Time-Delay Relay in the area shown in the control box using field-supplied screws. (See Fig. 7.)
2. Ensure the top terminals are up, as device is position-sensitive. (See Fig. 4.)

3. Run field-supplied 18 AWG (American Wire Gauge) wires from quick-connect terminals in the device to the unit as shown in Fig. 8.
4. Repeat Steps 1 and 2 for all units. A second relay is required. (See Fig. 8.)

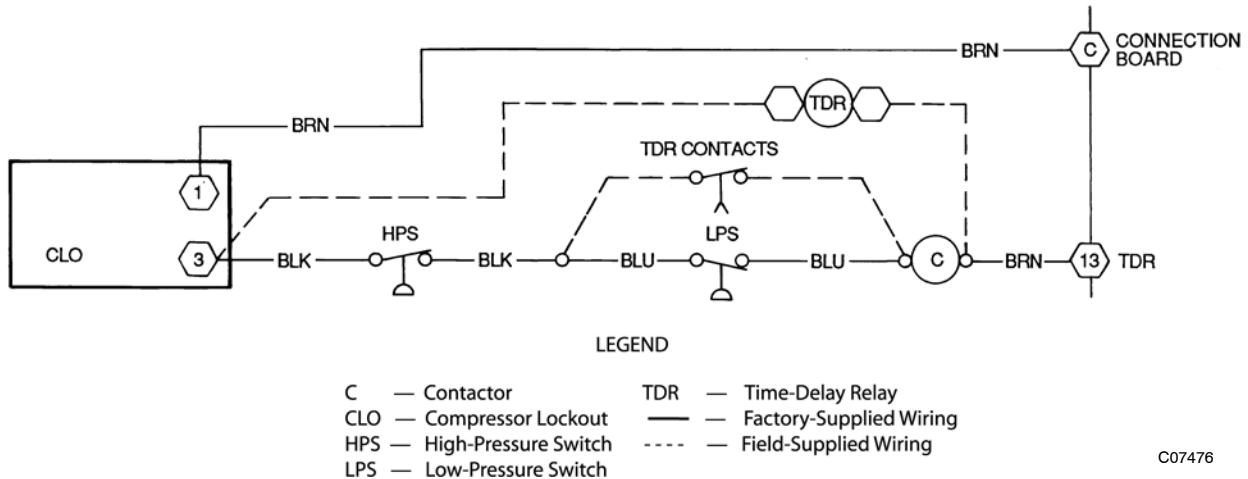

**Fig. 6 - Connection Points, Time-Delay Relay, Winter Start Accessory  
6 to 10 Ton Split System Condensing Units with Hermetic Compressors and  
7<sup>1</sup>/<sub>2</sub> to 10 Ton Split System Condensing Units with Semi-Hermetic Compressors with R-22 Refrigerant**

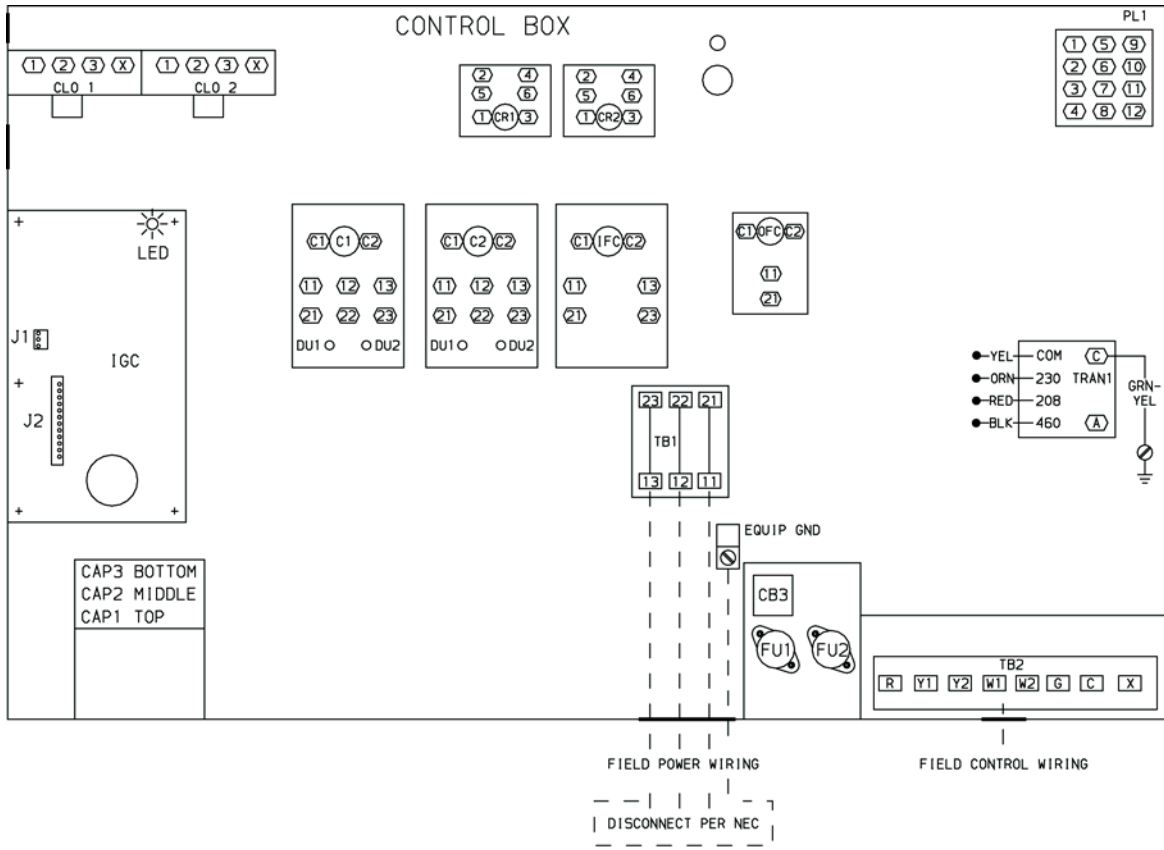


**LEGEND**

- |  |  |
|--|--|
| <b>C</b> — Contactor                           | <b>LED</b> — Light-Emitting Diode              |
| <b>CAP</b> — Capacitor                         | <b>LPS</b> — Low-Pressure Switch               |
| <b>CB</b> — Circuit Breaker                    | <b>NEC</b> — National Electrical Code          |
| <b>CLO</b> — Cooling Lockout                   | <b>OFC</b> — Outdoor (Condenser) Fan Contactor |
| <b>CR</b> — Control Relay                      | <b>PL</b> — Plug                               |
| <b>DU</b> — Dummy Terminal                     | <b>QT</b> — Quadruple Terminal                 |
| <b>EQUIP</b> — Equipment                       | <b>TB</b> — Terminal Block                     |
| <b>FPT</b> — Freeze Protection Thermostat      | <b>TDR</b> — Time-Delay Relay                  |
| <b>FU</b> — Fuse                               | <b>TRAN</b> — Transformer                      |
| <b>HPS</b> — High-Pressure Switch              | — Factory-Supplied Wiring                      |
| <b>IFC</b> — Indoor (Evaporator) Fan Contactor | --- Field-Supplied Wiring                      |
| <b>IGC</b> — Integrated Gas Controller         |  |

C07477

**Fig. 7 - Typical Control Box for 12 to 20 Ton High-Efficiency Medium Rooftop Units with R-22 Refrigerant**

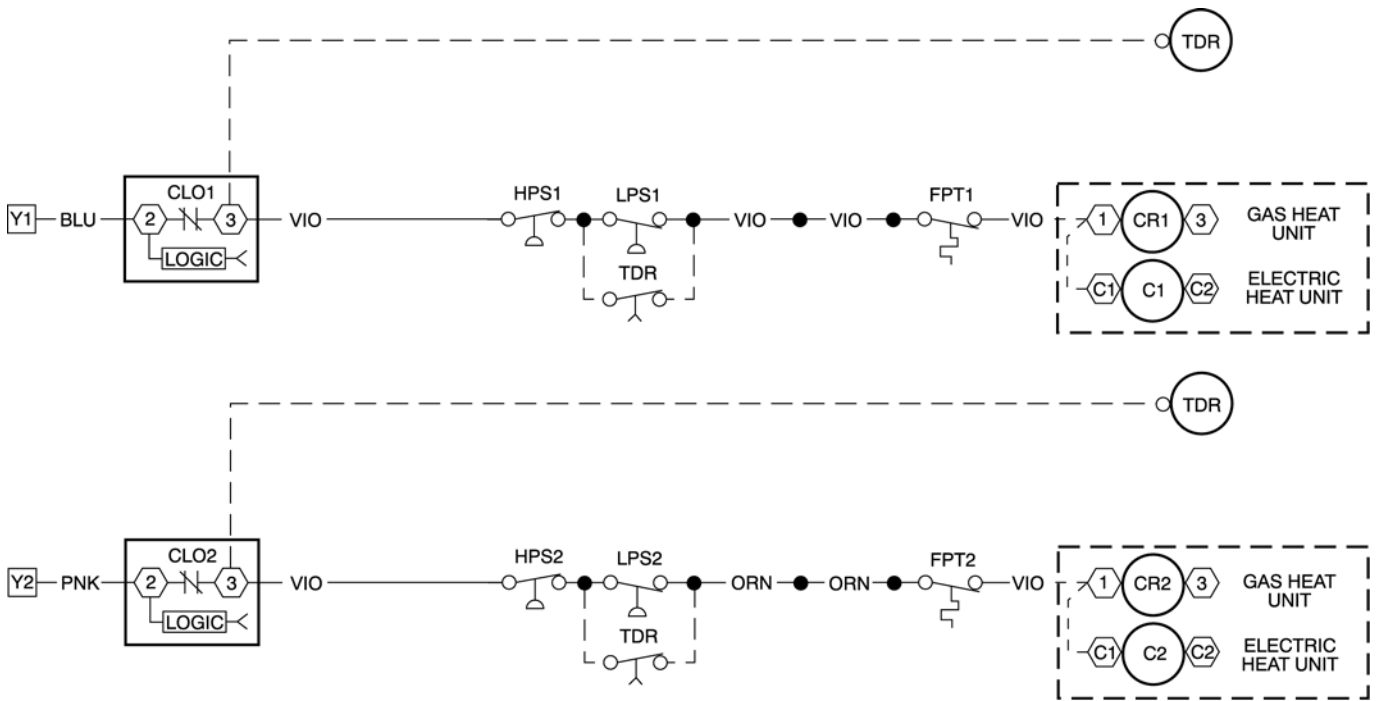

**LEGEND**

- |  |  |
|--|--|
| <b>C</b> — Contactor                           | <b>LED</b> — Light-Emitting Diode              |
| <b>CAP</b> — Capacitor                         | <b>LPS</b> — Low-Pressure Switch               |
| <b>CB</b> — Circuit Breaker                    | <b>NEC</b> — National Electrical Code          |
| <b>CLO</b> — Cooling Lockout                   | <b>OFC</b> — Outdoor (Condenser) Fan Contactor |
| <b>CR</b> — Control Relay                      | <b>PL</b> — Plug                               |
| <b>DU</b> — Dummy Terminal                     | <b>QT</b> — Quadruple Terminal                 |
| <b>EQUIP</b> — Equipment                       | <b>TB</b> — Terminal Block                     |
| <b>FPT</b> — Freeze Protection Thermostat      | <b>TDR</b> — Time-Delay Relay                  |
| <b>FU</b> — Fuse                               | <b>TRAN</b> — Transformer                      |
| <b>HPS</b> — High-Pressure Switch              | — Factory-Supplied Wiring                      |
| <b>IFC</b> — Indoor (Evaporator) Fan Contactor | - - - Field-Supplied Wiring                    |
| <b>IGC</b> — Integrated Gas Controller         |  |

C07478

**Fig. 8 - Connection Points, Time-Delay Relay, Winter Start Accessory;  
12 to 20 Ton High-Efficiency Medium Rooftop Units with R-22 Refrigerant**


## Winter Start Accessory — 12 to 25 Ton Standard Efficiency Medium Rooftop Units with R-22 Refrigerant

Refer to unit label diagram and install time-delay relay(s) (TDR) in unit as follows. Note that 2 TDRs are required for all units.

1. Install the Time-Delay Relay(s) in the area shown in the control box, using field-supplied screws. (See Fig. 9.)
2. Ensure the top terminals are up, as device is position-sensitive. (See Fig. 4.)

3. Run field-supplied 18 AWG (American Wire Gauge) wires from quick-terminals in the device(s) to the unit as shown in Fig. 10.

4. Repeat Steps 1 and 2 for the second circuit. (See Fig. 10.)

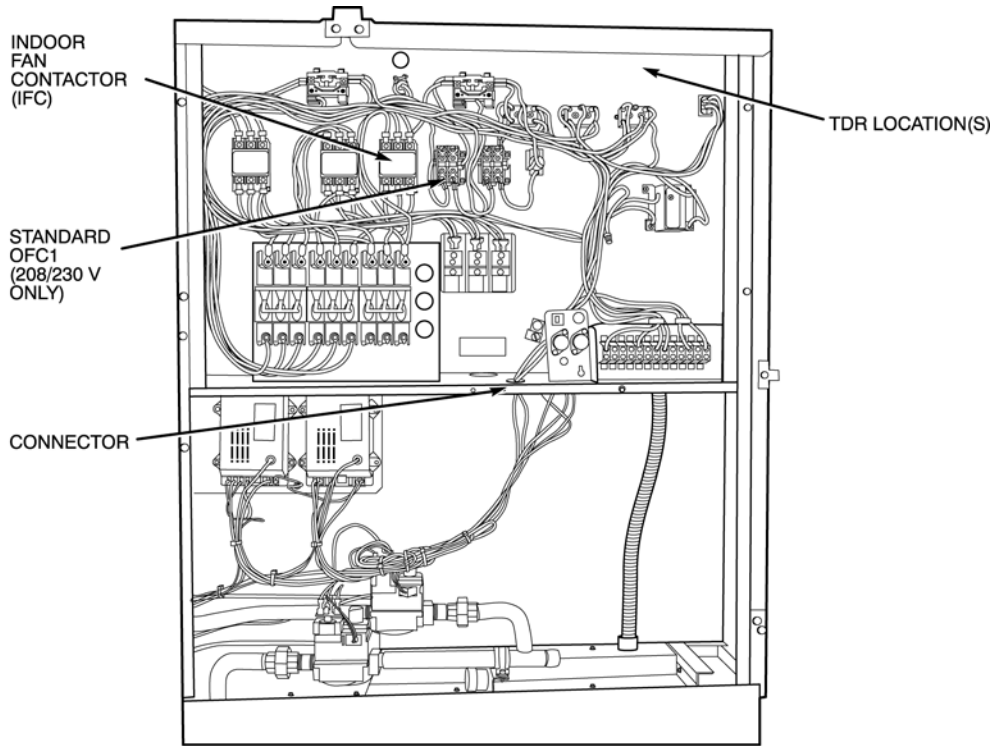

### LEGEND


OFC — Outdoor (Condenser) Fan Contactor  
TDR — Time-Delay Relay

\* Factory installed on gas heat units; field installed on electric heat units.


C07479

**Fig. 9 - Typical Control Box for 12 to 25 Ton Standard Efficiency Medium Rooftop Units with R-22 Refrigerant (208/230 V Gas Heat Unit Shown)**



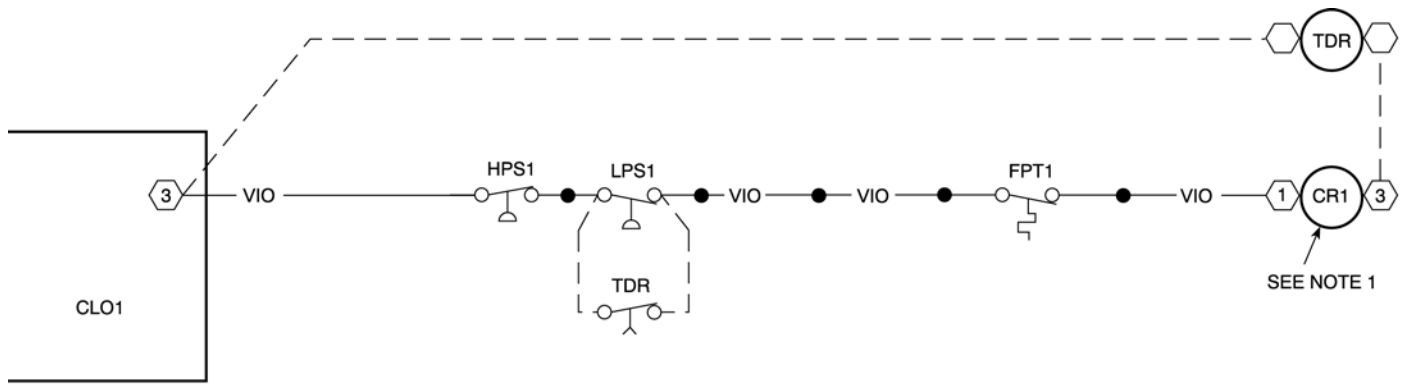

SEE NOTE 1

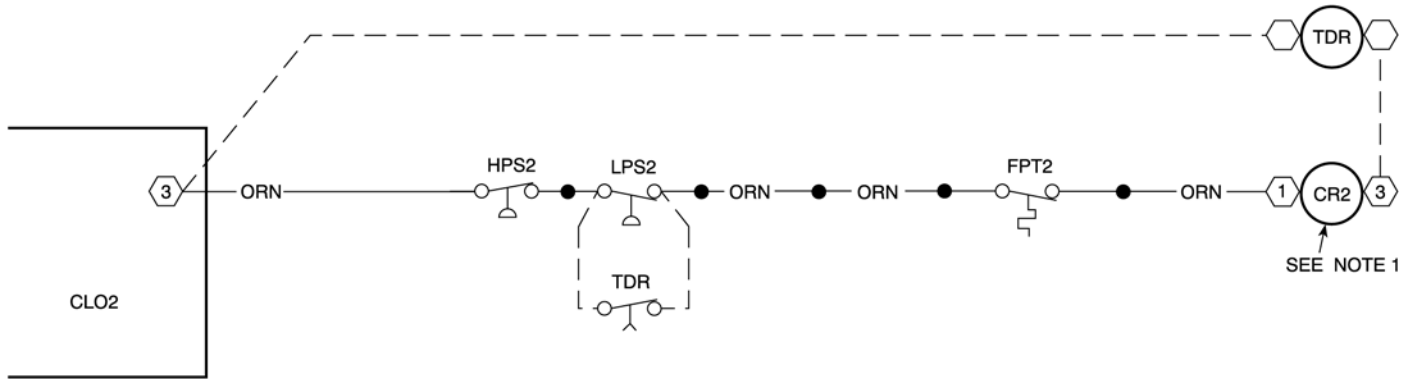

SEE NOTE 1

CRWINSTR/CATRANRY

**LEGEND**

- |   |                                  |
|---|----------------------------------|
| <b>CLO</b> — Compressor Lockout           | <b>LPS</b> — Low-Pressure Switch |
| <b>CR</b> — Control Relay                 | <b>TDR</b> — Time-Delay Relay    |
| <b>FPT</b> — Freeze Protection Thermostat | ——— Factory-Supplied Wiring      |
| <b>HPS</b> — High-Pressure Switch         | - - - - - Field-Supplied Wiring  |

C07480

**NOTES:**

1. Control relays CR1 and CR2 are replaced by C1 and C2 in 460-v and 575-v units.
2. Connection points shown are typical for each relay; a relay (CR) and contactor (C) are supplied on each circuit for 25 ton units.

**Fig. 10 - Connection Points, Time-Delay Relay, Winter Start Accessory;  
12 to 25 Ton Standard Efficiency Medium Rooftop Units with R-22 Refrigerant**

## Winter Start Accessory — 3 to 10 Ton Rooftop Units with Puron® Refrigerant

Refer to unit label diagram and install Time-Delay Relay(s) (TDR) in unit as follows.

1. Install the Time-Delay Relay(s) in the area shown in the control box, using field-supplied screws. (See Fig. 11.)
2. Ensure the top terminals are up, as device is position-sensitive. (See Fig. 4.)

3. Run field-supplied 18 AWG (American Wire Gauge) wires from quick-connect terminals in the device(s) to the unit as shown in Fig. 12.

4. Repeat Steps 1 and 2 for any models with second circuit of cooling.

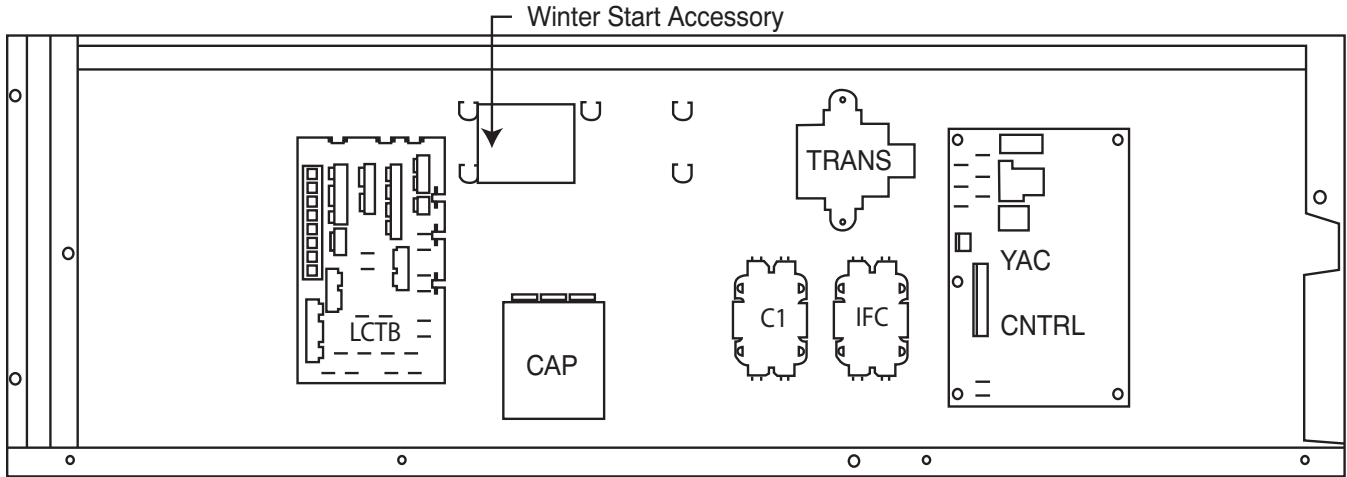


Fig. 11 - Winter Start Accessory Location for 3-10 Ton Rooftop Units with Puron® Refrigerant and Single Circuit

C08279


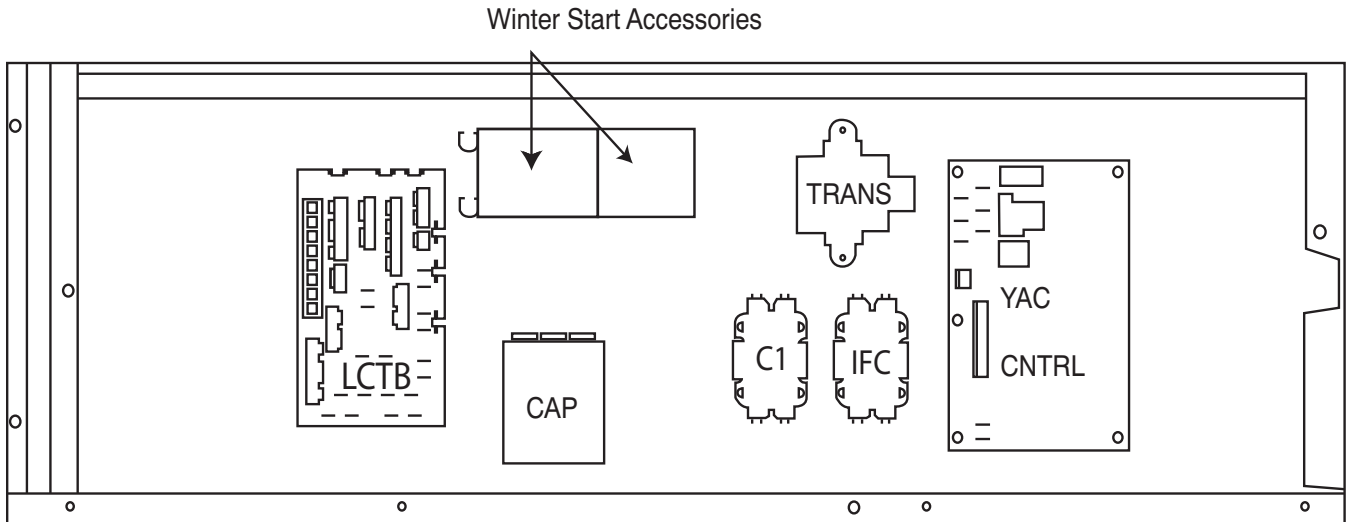


Fig. 12 - Winter Start Accessory Location for 7.5-10 Ton Rooftop Units with Puron Refrigerant, Two Circuits and No Cycle Loc Control

C08277

### Winter Start Accessory

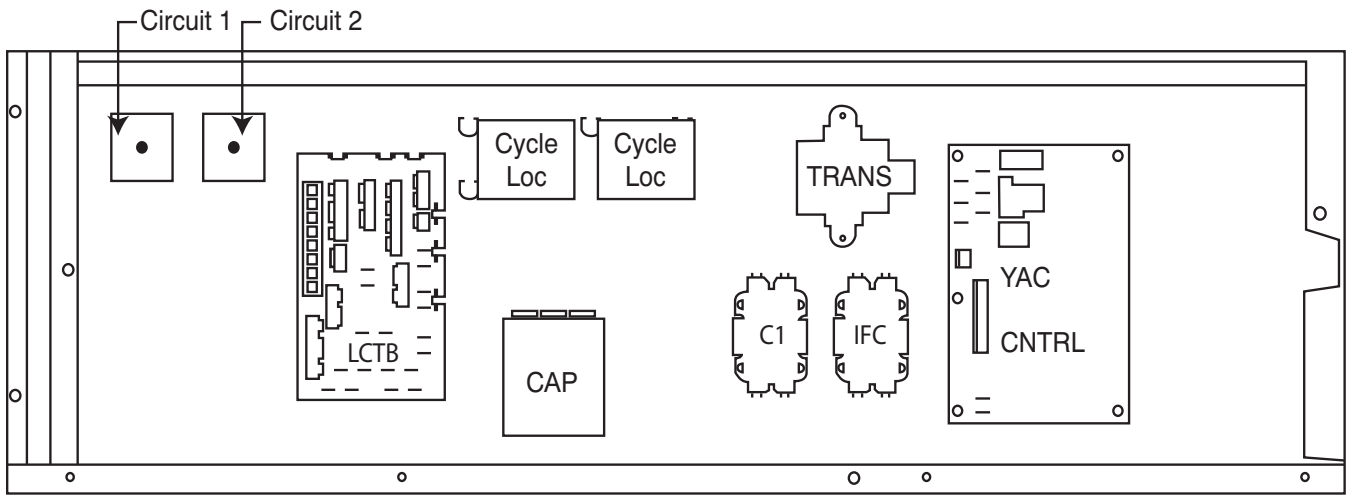


**Fig. 13 - Winter Start Accessory Location for 7.5-10 Ton Rooftop Units with Puron® Refrigerant, Two Circuits and Cycle Loc Control**

C08278

**CRWINSTR/CATRANRY**


### Unit Terminal Board

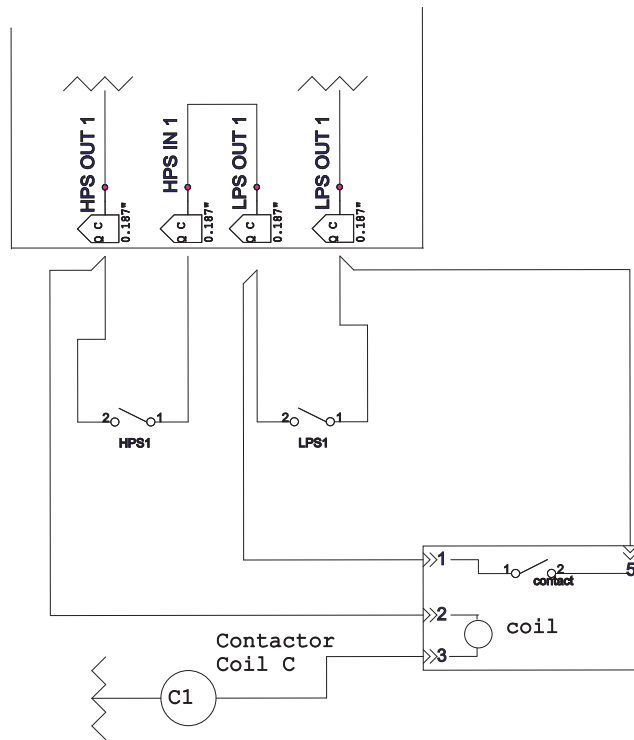

**Fig. 14 - Single Circuit**

C08280

# Unit Terminal Board

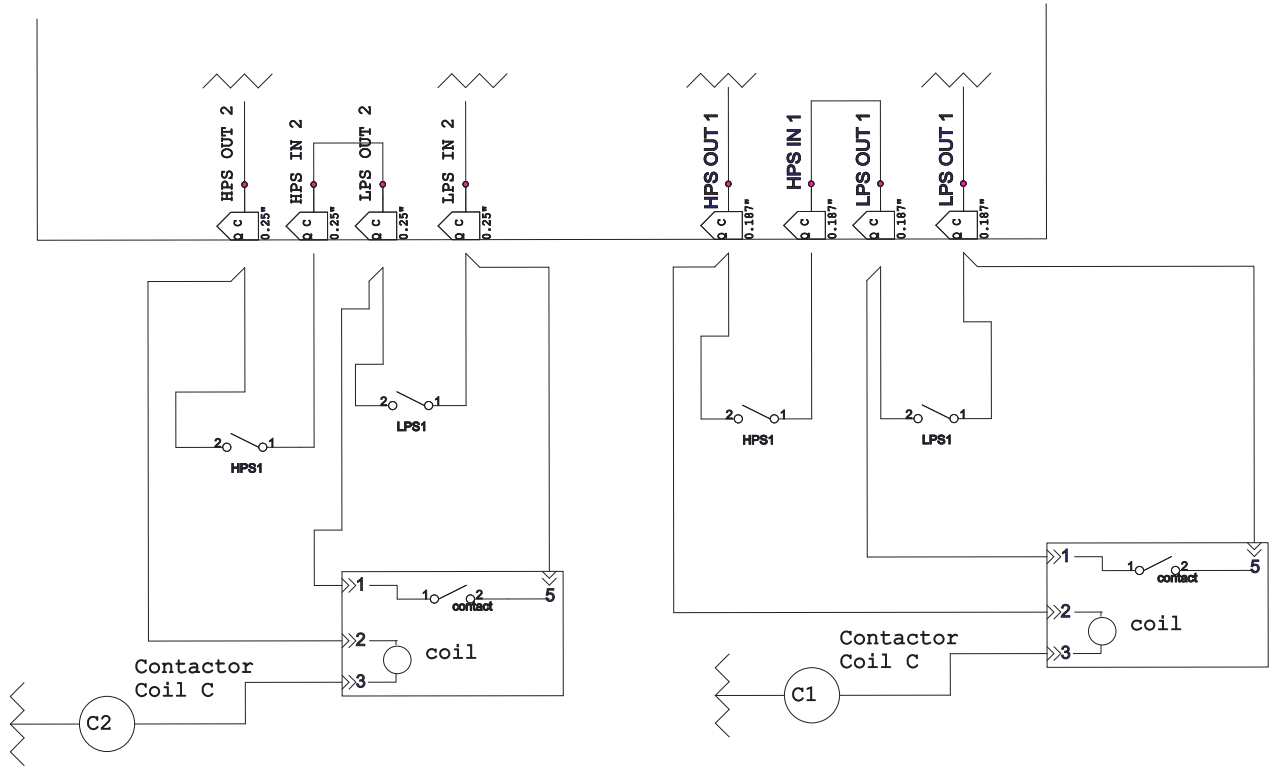

CRWINSTR/CATRANRY

Fig. 15 - Two Circuit

C08281